Long-Term Pavement Performance Bind Online User Guide

PUBLICATION NO. FHWA-HRT-17-010

OCTOBER 2017





U.S. Department of Transportation **Federal Highway Administration**

Research, Development, and Technology Turner-Fairbank Highway Research Center 6300 Georgetown Pike McLean, VA 22101-2296



FOREWORD

This document presents the user guide for the Long-Term Pavement Performance (LTPP) Webbased tool to select asphalt binders. The LTPPBind Online tool was developed to help State transportation departments, universities faculties and researchers select the most suitable performance-grade binder for a particular site based on the American Association of State and Highway Transportation Officials (AASHTO) M320-10 and AASHTO M332-14 standards. (1–3)

LTPPBind Online provides the option to use LTPP climatic data (virtual weather station or automatic weather station), manual data, or National Aeronautics and Space Administration Modern-Era Retrospective Analysis for Research and Applications climatic data collected globally since 1979. (4,5)

High-temperature (HT) Performance Grade is selected based on a rutting damage model. HT equation is function of target rut depth, yearly degree-days and latitude of site. (b) Low-temperature (LT) PG binder is selected using the algorithm developed from LTPP climatic data. LT algorithm relates surface low pavement temperature to air temperature, latitude, and depth. (7)

This new software tool provides pavement engineers with the ability to select binder grades that are less restrictive, more cost-effective, and agree with Superpave PG concepts.

Cheryl Allen Richter, Ph.D., P.E. Director, Office of Infrastructure Research and Development

Notice

This document is disseminated under the sponsorship of the U.S. Department of Transportation in the interest of information exchange. The U.S. Government assumes no liability for the use of the information contained in this document. This report does not constitute a standard, specification, or regulation.

The U.S. Government does not endorse products or manufacturers. Trademarks or manufacturers' names appear in this report only because they are considered essential to the objective of the document.

Quality Assurance Statement

The Federal Highway Administration (FHWA) provides high-quality information to serve Government, industry, and the public in a manner that promotes public understanding. Standards and policies are used to ensure and maximize the quality, objectivity, utility, and integrity of its information. FHWA periodically reviews quality issues and adjusts its programs and processes to ensure continuous quality improvement.

TECHNICAL REPORT DOCUMENTATION PAGE

. Report No. 2. Government Accession No.		3. Recipient's Catalog No.				
FHWA-HRT-17-010 4. Title and Subtitle			5 Days 4 Days			
Long-Term Pavement Performance Bind Online User Guide			5. Report Date October 2017			
Long-Term Pavement Performance Bind Online Oser Guide			6. Performing Organization Code			
7. Author(s)			8. Pe	erforming Organization	on Report No.	
Riaz Ahmad, Jose R. Menendez, and						
9. Performing Organization Name and Address			10. V	Work Unit No. (TRA	IS)	
iENGINEERING Corporation						
24805 Pinebrook Road, Suite 204			11. Contract or Grant No.			
Chantilly, VA 20152-4128			DTF	H61-14-C-00034		
12. Sponsoring Agency Name and Ad			13. Type of Report and Period Covered			
Office of Infrastructure Research and	Deve	elopment		l Report		
Federal Highway Administration			14. \$	Sponsoring Agency C	Code	
6300 Georgetown Pike						
McLean, VA 22101-2296						
15. Supplementary Notes	.•	I W. (IIDDI 20)				
The Contracting Officer's Representa	itive v	was Larry Wiser (HRDI-30).				
16. Abstract	c		(T.)	TDD\ W 1 1 1.	1 1.	
This document presents the user guide						
select asphalt binders. LTPPBind Onl suitable performance-grade binder for						
Transportation Officials (AASHTO)						
option to use National Aeronautics and Space Administration Modern-Era Retrospective Analysis for Research and Applications climatic data collected globally since 1979, LTPP climatic data (virtual weather station or automatic						
weather station), or manual data.	,iooui	ly since 1979, 2111 chimatic de	ita (virtaar	weather station of at	itomatic	
High-temperature (HT) Performance Grade is selected based on a rutting damage model. HT equation is function of						
target rut depth, yearly degree-days and latitude of site (6). Low-temperature (LT) PG binder is selected using the						
algorithm developed from LTPP climatic data. LT algorithm relates surface low pavement temperature to air						
temperature, latitude, and depth ⁽⁷⁾ .						
temperature, ratitude, and depth .						
17. Key Words			18. Distril	bution Statement		
LTPPBind Online, Long-Term Pavement Performance, LTPP, climatic			No restrictions. This document is available			
data, pavement design, pavement performance, Modern-Era			to the public through the National Technical			
Retrospective Analysis for Research and Application, MERRA,			Information Service, Springfield, VA			
performance grade, PG, binder			22161.			
			http://www.ntis.gov			
19. Security Classif. (of this report)		20. Security Classif. (of this pa	ige)	21. No. of Pages	22. Price	
Unclassified Unclassified			24			

Unclassified Form DOT F 1700.7 (8-72)

Reproduction of completed page authorized.

		MATE CONVERSION	SI* (MODERN METRIC) CONVERSION FACTORS APPROXIMATE CONVERSIONS TO SI UNITS				
Symbol	When You Know	Multiply By	To Find	Symbol			
		LENGTH					
in	inches	25.4	millimeters	mm			
ft	feet	0.305	meters	m			
yd	yards	0.914	meters	m			
mi	miles	1.61	kilometers	km			
		AREA					
in ²	square inches	645.2	square millimeters	mm²			
t ²	square feet	0.093	square meters	m ²			
/d ²	square yard	0.836	square meters	m²			
ac .2	acres	0.405	hectares	ha			
ni ²	square miles	2.59	square kilometers	km ²			
		VOLUME					
loz	fluid ounces	29.57	milliliters	mL			
gal 't ³	gallons	3.785	liters	L m³			
	cubic feet	0.028	cubic meters	m² m³			
/d ³	cubic yards	0.765	cubic meters	m.			
	NOTE: VOIU	imes greater than 1000 L shal	I DE 2110MII III III				
		MASS					
DZ	ounces	28.35	grams	g			
b -	pounds	0.454	kilograms	kg			
Γ	short tons (2000 lb)	0.907	megagrams (or "metric ton")	Mg (or "t")			
_		MPERATURE (exact de		0 -			
°F	Fahrenheit	5 (F-32)/9	Celsius	°C			
		or (F-32)/1.8					
		ILLUMINATION					
fc	foot-candles	10.76	lux	lx			
fl	foot-Lamberts	3.426	candela/m²	cd/m ²			
	EOD	OF and DDECCUDE an	STRESS				
	FUR	CE and PRESSURE or	OTIVEOU				
lbf	poundforce	4.45	newtons	N			
lbf lbf/in ²				N kPa			
	poundforce poundforce per square inch	4.45	newtons kilopascals				
lbf/in ²	poundforce poundforce per square inch	4.45 6.89	newtons kilopascals				
lbf/in ²	poundforce poundforce per square inch	4.45 6.89 ATE CONVERSIONS	newtons kilopascals FROM SI UNITS	kPa			
	poundforce poundforce per square inch	4.45 6.89 ATE CONVERSIONS Multiply By	newtons kilopascals FROM SI UNITS	kPa			
Symbol	poundforce poundforce per square inch APPROXIMA When You Know	4.45 6.89 ATE CONVERSIONS Multiply By LENGTH	newtons kilopascals FROM SI UNITS To Find	kPa Symbol			
Symbol mm	poundforce per square inch APPROXIMA When You Know millimeters	4.45 6.89 ATE CONVERSIONS Multiply By LENGTH 0.039	newtons kilopascals FROM SI UNITS To Find inches	kPa Symbol in			
Symbol mm m	poundforce poundforce per square inch APPROXIMA When You Know millimeters meters	4.45 6.89 ATE CONVERSIONS Multiply By LENGTH 0.039 3.28	newtons kilopascals FROM SI UNITS To Find inches feet	kPa Symbol in ft			
Symbol mm m	poundforce poundforce per square inch APPROXIMA When You Know millimeters meters meters meters	4.45 6.89 ATE CONVERSIONS Multiply By LENGTH 0.039 3.28 1.09 0.621	newtons kilopascals FROM SI UNITS To Find inches feet yards	Symbol in ft yd			
Symbol nm n n m	poundforce poundforce per square inch APPROXIMA When You Know millimeters meters meters meters	4.45 6.89 ATE CONVERSIONS Multiply By LENGTH 0.039 3.28 1.09	newtons kilopascals FROM SI UNITS To Find inches feet yards	kPa Symbol in ft yd mi in²			
Symbol nm n n n n n n n n n n n n n n n n n	poundforce poundforce per square inch APPROXIMA When You Know millimeters meters meters meters kilometers	4.45 6.89 ATE CONVERSIONS Multiply By LENGTH 0.039 3.28 1.09 0.621 AREA	newtons kilopascals FROM SI UNITS To Find inches feet yards miles	kPa Symbol in ft yd mi in² ft²			
Symbol mm n n mm m n m m n m m m m m m m m m	poundforce poundforce per square inch APPROXIMA When You Know millimeters meters meters kilometers square millimeters	4.45 6.89 ATE CONVERSIONS Multiply By LENGTH 0.039 3.28 1.09 0.621 AREA 0.0016	newtons kilopascals FROM SI UNITS To Find inches feet yards miles square inches	kPa Symbol in ft yd mi in² ft²			
Symbol mm m m m m m m m m m m m m m m m m m	poundforce poundforce per square inch APPROXIMA When You Know millimeters meters meters kilometers square millimeters square meters	4.45 6.89 ATE CONVERSIONS Multiply By LENGTH 0.039 3.28 1.09 0.621 AREA 0.0016 10.764	newtons kilopascals FROM SI UNITS To Find inches feet yards miles square inches square feet	kPa Symbol in ft yd mi in² ft² yd² ac			
Symbol mm m m m m m m m m m m m m m m m m m	poundforce poundforce per square inch APPROXIMA When You Know millimeters meters meters kilometers square millimeters square meters square meters square meters square meters	4.45 6.89 ATE CONVERSIONS Multiply By LENGTH 0.039 3.28 1.09 0.621 AREA 0.0016 10.764 1.195 2.47 0.386	newtons kilopascals FROM SI UNITS To Find inches feet yards miles square inches square feet square yards	symbol in ft yd mi in² ft² yd²			
Symbol mm m m m m m m m m m m m m m m m m m	poundforce poundforce per square inch APPROXIMA When You Know millimeters meters meters kilometers square millimeters square meters square meters square meters hectares	4.45 6.89 ATE CONVERSIONS Multiply By LENGTH 0.039 3.28 1.09 0.621 AREA 0.0016 10.764 1.195 2.47 0.386	newtons kilopascals FROM SI UNITS To Find inches feet yards miles square inches square feet square yards acres	kPa Symbol in ft yd mi in² ft² yd² ac			
Symbol mm m m m m m m m m m m m	poundforce poundforce per square inch APPROXIMA When You Know millimeters meters meters kilometers square millimeters square meters square meters square meters hectares	4.45 6.89 ATE CONVERSIONS Multiply By LENGTH 0.039 3.28 1.09 0.621 AREA 0.0016 10.764 1.195 2.47	newtons kilopascals FROM SI UNITS To Find inches feet yards miles square inches square feet square yards acres	kPa Symbol in ft yd mi in² ft² yd² ac			
Symbol mm m m km m² m² m² n² na km² ma	poundforce poundforce per square inch APPROXIMA When You Know millimeters meters meters kilometers square millimeters square meters square meters hectares square kilometers	4.45 6.89 ATE CONVERSIONS Multiply By LENGTH 0.039 3.28 1.09 0.621 AREA 0.0016 10.764 1.195 2.47 0.386 VOLUME	newtons kilopascals FROM SI UNITS To Find inches feet yards miles square inches square feet square yards acres square miles	symbol in ft yd mi in² ft² yd² ac mi² fl oz			
Symbol mm m m m m m m m m m m m m m m m m m	poundforce poundforce per square inch APPROXIMA When You Know millimeters meters meters kilometers square millimeters square meters square meters hectares square kilometers milliliters	4.45 6.89 ATE CONVERSIONS Multiply By LENGTH 0.039 3.28 1.09 0.621 AREA 0.0016 10.764 1.195 2.47 0.386 VOLUME 0.034	newtons kilopascals FROM SI UNITS To Find inches feet yards miles square inches square feet square yards acres square miles fluid ounces	symbol in ft yd mi in² ft² yd² ac mi²			
Symbol mm m m m m m m m m m m m	poundforce poundforce per square inch APPROXIMA When You Know millimeters meters meters kilometers square millimeters square meters square meters hectares square kilometers milliiliters liters	4.45 6.89 ATE CONVERSIONS Multiply By LENGTH 0.039 3.28 1.09 0.621 AREA 0.0016 10.764 1.195 2.47 0.386 VOLUME 0.034 0.264	newtons kilopascals FROM SI UNITS To Find inches feet yards miles square inches square feet square yards acres square miles fluid ounces gallons	kPa Symbol in ft yd mi in² ft² yd² ac mi² fl oz gal			
Symbol mm m m km mm² m² ha km² mL L m³	poundforce poundforce per square inch APPROXIMA When You Know millimeters meters meters kilometers square millimeters square meters hectares square kilometers milliliters liters cubic meters	4.45 6.89 ATE CONVERSIONS Multiply By LENGTH 0.039 3.28 1.09 0.621 AREA 0.0016 10.764 1.195 2.47 0.386 VOLUME 0.034 0.264 35.314 1.307	newtons kilopascals FROM SI UNITS To Find inches feet yards miles square inches square feet square yards acres square miles fluid ounces gallons cubic feet	kPa Symbol in ft yd mi in² ft² yd² ac mi² fl oz gal ft³			
Symbol mm m m km m² m² ha km² mL L m³ m³ m³	poundforce poundforce per square inch APPROXIMA When You Know millimeters meters meters kilometers square millimeters square meters hectares square kilometers milliliters liters cubic meters cubic meters	4.45 6.89 ATE CONVERSIONS Multiply By LENGTH 0.039 3.28 1.09 0.621 AREA 0.0016 10.764 1.195 2.47 0.386 VOLUME 0.034 0.264 35.314 1.307 MASS	newtons kilopascals FROM SI UNITS To Find inches feet yards miles square inches square feet square yards acres square miles fluid ounces gallons cubic feet cubic yards	kPa Symbol in ft yd mi in² ft² yd² ac mi² fl oz gal ft³ yd³			
Symbol mm m m km m² m² m² ha km² mL L m³ m³	poundforce poundforce per square inch APPROXIMA When You Know millimeters meters meters kilometers square millimeters square meters hectares square kilometers milliliters liters cubic meters	4.45 6.89 ATE CONVERSIONS Multiply By LENGTH 0.039 3.28 1.09 0.621 AREA 0.0016 10.764 1.195 2.47 0.386 VOLUME 0.034 0.264 35.314 1.307	newtons kilopascals FROM SI UNITS To Find inches feet yards miles square inches square feet square yards acres square miles fluid ounces gallons cubic feet	kPa Symbol in ft yd mi in² ft² yd² ac mi² fl oz gal ft³			
Symbol mm n n n n n n n n n n n n n n n n n	poundforce poundforce per square inch APPROXIMA When You Know millimeters meters meters kilometers square millimeters square meters square meters hectares square kilometers milliliters liters cubic meters cubic meters grams kilograms	4.45 6.89 ATE CONVERSIONS Multiply By LENGTH 0.039 3.28 1.09 0.621 AREA 0.0016 10.764 1.195 2.47 0.386 VOLUME 0.034 0.264 35.314 1.307 MASS 0.035	newtons kilopascals FROM SI UNITS To Find inches feet yards miles square inches square feet square yards acres square miles fluid ounces gallons cubic feet cubic yards	kPa Symbol in ft yd mi in² ft² yd² ac mi² fl oz gal ft³ yd³ oz			
Symbol mm n n n n n n n n n n n n n n n n n	poundforce poundforce per square inch APPROXIMA When You Know millimeters meters meters kilometers square millimeters square meters hectares square kilometers milliliters liters cubic meters cubic meters grams kilograms megagrams (or "metric ton")	4.45 6.89 ATE CONVERSIONS Multiply By LENGTH 0.039 3.28 1.09 0.621 AREA 0.0016 10.764 1.195 2.47 0.386 VOLUME 0.034 0.264 35.314 1.307 MASS 0.035 2.202 1.103	newtons kilopascals FROM SI UNITS To Find inches feet yards miles square inches square feet square yards acres square miles fluid ounces gallons cubic feet cubic yards ounces pounds short tons (2000 lb)	kPa Symbol in ft yd mi in² ft² yd² ac mi² fl oz gal ft³ yd³ oz lb			
Symbol mm n n n cm mm² n² n² n² na cm² ma cm² mu mu mu mu mu mu mu mu mu m	poundforce poundforce per square inch APPROXIMA When You Know millimeters meters meters kilometers square millimeters square meters square meters hectares square kilometers milliliters liters cubic meters cubic meters grams kilograms megagrams (or "metric ton")	4.45 6.89 ATE CONVERSIONS Multiply By LENGTH 0.039 3.28 1.09 0.621 AREA 0.0016 10.764 1.195 2.47 0.386 VOLUME 0.034 0.264 35.314 1.307 MASS 0.035 2.202 1.103 MPERATURE (exact de	newtons kilopascals FROM SI UNITS To Find inches feet yards miles square inches square feet square yards acres square miles fluid ounces gallons cubic feet cubic yards ounces pounds short tons (2000 lb)	kPa Symbol in ft yd mi in² ft² yd² ac mi² fl oz gal ft³ yd³ oz lb T			
Symbol mm m m m cm mm² m² m² m² m² ma cm² m² mu mm² m² m² m² ma cm² mu mm² my² m² ma my² my² ma my²	poundforce poundforce per square inch APPROXIMA When You Know millimeters meters meters kilometers square millimeters square meters hectares square kilometers milliliters liters cubic meters cubic meters grams kilograms megagrams (or "metric ton")	4.45 6.89 ATE CONVERSIONS Multiply By LENGTH 0.039 3.28 1.09 0.621 AREA 0.0016 10.764 1.195 2.47 0.386 VOLUME 0.034 0.264 35.314 1.307 MASS 0.035 2.202 1.103 MPERATURE (exact de 1.8C+32	newtons kilopascals FROM SI UNITS To Find inches feet yards miles square inches square feet square yards acres square miles fluid ounces gallons cubic feet cubic yards ounces pounds short tons (2000 lb)	kPa Symbol in ft yd mi in² ft² yd² ac mi² fl oz gal ft³ yd³ oz lb			
Symbol mm m m m ckm mm² m² m² m² m² ma ckm² mL	poundforce poundforce per square inch APPROXIMA When You Know millimeters meters meters kilometers square millimeters square meters hectares square kilometers milliliters liters cubic meters cubic meters grams kilograms megagrams (or "metric ton") TEI Celsius	4.45 6.89 ATE CONVERSIONS Multiply By LENGTH 0.039 3.28 1.09 0.621 AREA 0.0016 10.764 1.195 2.47 0.386 VOLUME 0.034 0.264 35.314 1.307 MASS 0.035 2.202 1.103 MPERATURE (exact de 1.8C+32 ILLUMINATION	newtons kilopascals FROM SI UNITS To Find inches feet yards miles square inches square feet square yards acres square miles fluid ounces gallons cubic feet cubic yards ounces pounds short tons (2000 lb) egrees) Fahrenheit	kPa Symbol in ft yd mi in² ft² yd² ac mi² fl oz gal ft³ yd³ oz lb T			
Symbol mm m m m m cm m m cm m m m cm m m m cm m m m cm m m m m cm m m m cm m m cm c	poundforce poundforce per square inch APPROXIMA When You Know millimeters meters meters kilometers square millimeters square meters square meters hectares square kilometers milliliters liters cubic meters cubic meters kilograms megagrams (or "metric ton") TEI Celsius	4.45 6.89 ATE CONVERSIONS Multiply By LENGTH 0.039 3.28 1.09 0.621 AREA 0.0016 10.764 1.195 2.47 0.386 VOLUME 0.034 0.264 35.314 1.307 MASS 0.035 2.202 1.103 MPERATURE (exact de 1.8C+32 ILLUMINATION 0.0929	newtons kilopascals FROM SI UNITS To Find inches feet yards miles square inches square feet square yards acres square miles fluid ounces gallons cubic feet cubic yards ounces pounds short tons (2000 lb) egrees) Fahrenheit foot-candles	kPa Symbol in ft yd mi in² ft² yd² ac mi² fl oz gal ft³ yd³ oz lb T			
Symbol mm m m m m cm m m cm m m m cm m m m cm m m m cm m m m m cm m m m cm m m cm c	poundforce poundforce per square inch APPROXIMA When You Know millimeters meters meters kilometers square millimeters square meters square meters hectares square kilometers milliliters liters cubic meters cubic meters grams kilograms megagrams (or "metric ton") TEI Celsius lux candela/m²	4.45 6.89 ATE CONVERSIONS Multiply By LENGTH 0.039 3.28 1.09 0.621 AREA 0.0016 10.764 1.195 2.47 0.386 VOLUME 0.034 0.264 35.314 1.307 MASS 0.035 2.202 1.103 MPERATURE (exact de 1.8C+32 ILLUMINATION 0.0929 0.2919	newtons kilopascals FROM SI UNITS To Find inches feet yards miles square inches square feet square yards acres square miles fluid ounces gallons cubic feet cubic yards ounces pounds short tons (2000 lb) egrees) Fahrenheit foot-candles foot-Lamberts	kPa Symbol in ft yd mi in² ft² yd² ac mi² fl oz gal ft³ yd³ oz lb T			
Symbol mm m m m m m cm mm² m² m² m² na cm² ma m cm² cm² cm² cm² cm² cm² cc cd/m²	poundforce poundforce per square inch APPROXIMA When You Know millimeters meters meters kilometers square millimeters square meters square meters hectares square kilometers milliliters liters cubic meters cubic meters drams kilograms megagrams (or "metric ton") TEI Celsius lux candela/m² FORG	4.45 6.89 ATE CONVERSIONS Multiply By LENGTH 0.039 3.28 1.09 0.621 AREA 0.0016 10.764 1.195 2.47 0.386 VOLUME 0.034 0.264 35.314 1.307 MASS 0.035 2.202 1.103 MPERATURE (exact de 1.8C+32 ILLUMINATION 0.0929 0.2919 CE and PRESSURE or	newtons kilopascals FROM SI UNITS To Find inches feet yards miles square inches square feet square yards acres square miles fluid ounces gallons cubic feet cubic yards ounces pounds short tons (2000 lb) egrees) Fahrenheit foot-candles foot-Lamberts STRESS	kPa Symbol in ft yd mi in² ft² yd² ac mi² fl oz gal ft³ yd³ oz lb T °F fc fl			
Symbol mm m m m m m c m² m² ha ha km² mL L m³ m³ m³	poundforce poundforce per square inch APPROXIMA When You Know millimeters meters meters kilometers square millimeters square meters square meters hectares square kilometers milliliters liters cubic meters cubic meters grams kilograms megagrams (or "metric ton") TEI Celsius lux candela/m²	4.45 6.89 ATE CONVERSIONS Multiply By LENGTH 0.039 3.28 1.09 0.621 AREA 0.0016 10.764 1.195 2.47 0.386 VOLUME 0.034 0.264 35.314 1.307 MASS 0.035 2.202 1.103 MPERATURE (exact de 1.8C+32 ILLUMINATION 0.0929 0.2919	newtons kilopascals FROM SI UNITS To Find inches feet yards miles square inches square feet square yards acres square miles fluid ounces gallons cubic feet cubic yards ounces pounds short tons (2000 lb) egrees) Fahrenheit foot-candles foot-Lamberts	kPa Symbol in ft yd mi in² ft² yd² ac mi² fl oz gal ft³ yd³ oz lb T °F			

TABLE OF CONTENTS

INTRODUCTION	1
LTPPBIND ONLINE ACCESS	1
CALCULATION PROCESS	2
GENERAL PROJECT INFORMATION	
CLIMATIC DATA SOURCE	3
MERRA Climatic Data	4
LTPP (Virtual Weather Station (VWS))	5
LTPP (AWS)	
Manual Climatic Data	
CLIMATIC DATA RESULTS	7
Target Rut Depth	8
TEMPERATURE ADJUSTMENT	8
TRAFFIC ADJUSTMENTS	9
REPORT	9
LOW-TEMPERATURE PG SELECTION	
HT PG SELECTION USING RUTTING DAMAGE MODEL	11
Estimate PG Variation	11
Adjust PG for Reliability	11
PG Bumping for HT	12
PG designation for traffic loading	12
Adjusting PG with Depth	13
REFERENCES	15

LIST OF FIGURES

Figure 1. Screenshot. LTPPBind Online on InfoPave TM	1
Figure 2. Screenshot. LTPPBind Online	2
Figure 3. Screenshot. LTPPBind Online—general project information	3
Figure 4. Screenshot. LTPPBind Online—selecting climatic data source	4
Figure 5. Screenshot. LTPPBind Online—select location for MERRA data	5
Figure 6. Screenshot. LTPPBind Online—select LTPP station	6
Figure 7. Screenshot. LTPPBind Online—select LTPP AWS	7
Figure 8. Screenshot. LTPPBind Online—generated climatic data	8
Figure 9. Screenshot. LTPPBind Online—target rut depth	
Figure 10. Screenshot. LTPPBind Online—Temperature adjustments	
Figure 11. Screenshot. LTPPBind Online—traffic adjustments	
Figure 12. Screenshot. LTPPBind Online—report	
Figure 13. Equation. Low pavement temperature at surface	
Figure 14. Equation. HT PG damage at rut depth	
Figure 15. Equation. PG coefficient of variation	
Figure 16. Equation. HT PG adjusted for reliability	
Figure 17. Equation. PG bumping for HT	
Figure 18. Equation. Pavement temperature below surface	13
LIST OF TABLES	
Table 1. Grade bumping.	12
Table 2. Designation for traffic loading	
- The state of the	

LIST OF ABBREVIATIONS

AASHTO American Association of State and Highway Transportation Officials

AWS automatic weather station ESAL equivalent single-axle load

HT high temperature

LTPP Long-Term Pavement Performance

MERRA Modern-Era Retrospective Analysis for Research and Application

NASA National Aeronautics and Space Administration

PG performance grade

SMP Seasonal Monitoring Program
SPS Specific Pavement Studies
VWS virtual weather station

INTRODUCTION

Long-Term Pavement Performance (LTPP) Bind Online is a Web-based tool used to help State transportation departments select the most suitable performance-grade (PG) asphalt binder for pavement construction at a particular site based on the American Association of State and Highway Transportation Officials (AASHTO) M320-10 and AASHTO M332-14 standards. (1–3)

LTPPBind Online provides the option to use the National Aeronautics and Space Administration's (NASA) Modern-Era Retrospective Analysis for Research and Application (MERRA) climatic data, LTPP climatic data, and manual data. Based on the selected climatic data, allowable rut depth, depth of asphalt concrete layer, base high temperature (HT) PG, equivalent single-axle loads (ESALs), and traffic speed, the user will be able to do the following:

- Select binder PGs based on actual temperature conditions at their site and the level of risk designated by their State transportation department.
- Adjust the PG selection for different levels of traffic loading and speed.
- Compare binder PGs between AASHTO M320-10 and AASHTO M332-14 standards. (2,3)

LTPPBIND ONLINE ACCESS

LTPPBind Online is available on the InfoPaveTM Web site under the "TOOLS" tab of the InfoPaveTM menu bar as shown in figure $1.^{(1,8)}$ To select LTPPBind Online, users need to register with InfoPaveTM using their email address or their social media accounts.

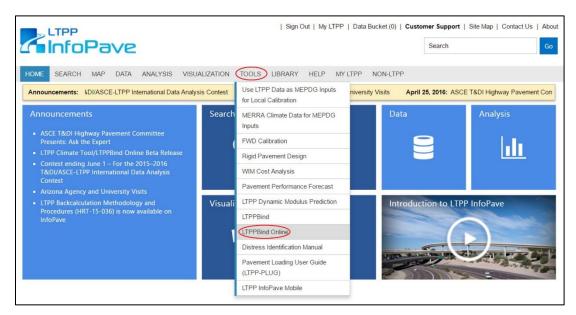


Figure 1. Screenshot. LTPPBind Online on InfoPaveTM. (1,8)

The LTPPBind Online main screen has two different options under the "Projects" tab: the "New Project" tab open a new project, and the "Open Project" tab allows the user to continue on a previously saved project, as shown in figure 2.⁽¹⁾ Each project includes a project number, a project title, and the date that the project was added. Previously saved projects can be opened or deleted by clicking on the "Open" and "Delete" buttons to the right-hand side of the project information (i.e., project number, project title, and date added).

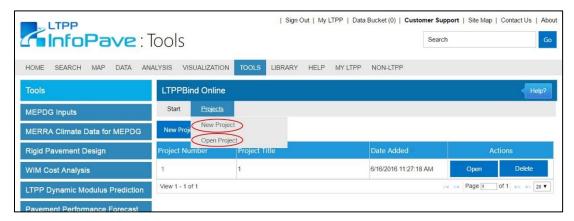


Figure 2. Screenshot. LTPPBind Online. (1)

CALCULATION PROCESS

The calculation process features the following six steps used to calculate the final binder PG:

- 1. General project information.
- 2. Climate data source.
- 3. Climate data.
- 4. Target rut depth.
- 5. Temperature adjustments.
- 6. Traffic adjustments.

General Project Information

At the beginning of a new project, users need to enter a project number, project title, and project description as shown in figure 3. The fields are defined as follows:

- *Project number* is a user-defined unique alpha numeric value for identifying an LTPPBind Online project. (1)
- *Project title* is a user-defined title for an LTPPBind Online project. (1)
- *Project description* is a brief description of an LTPPBind Online project. (1)

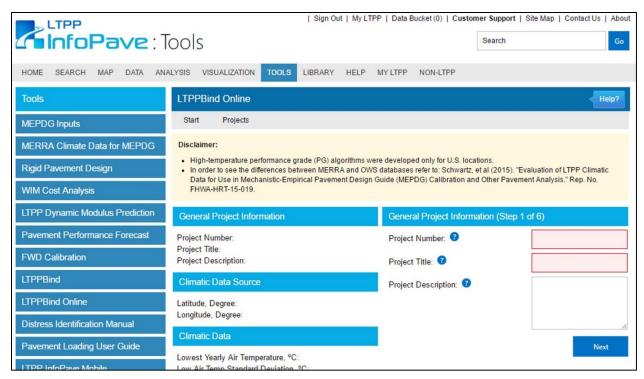


Figure 3. Screenshot. LTPPBind Online—general project information. (1)

Climatic Data Source

In LTPPBind Online, users have the flexibility to choose climatic data from MERRA or LTPP or manually input user-defined data as shown in figure 4.⁽¹⁾

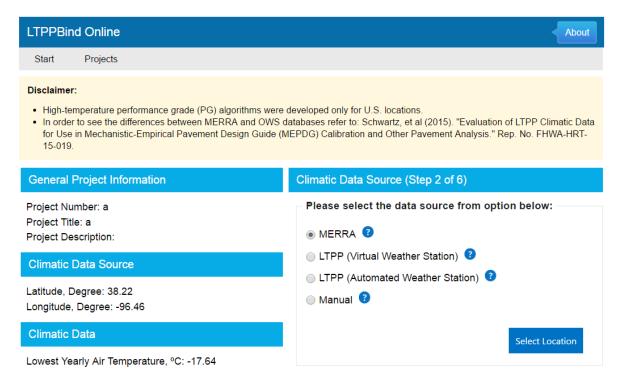



Figure 4. Screenshot. LTPPBind Online—selecting climatic data source. (1)

MERRA Climatic Data

MERRA climatic data are electronically collected by a NASA server in a 0.5-degree latitude by 0.67-degree longitude horizontal spatial grid. This grid translates into approximately 31.3 by 37.3 mi at mid-latitudes and atmospheric elevations, including the ground surface. Detailed information about MERRA data is available in *Evaluation of Long-Term Pavement Performance* (*LTPP*) Climatic Data for Use in Mechanistic-Empirical Pavement Design Guide (MEPDG) Calibration and Other Pavement Analysis. (9)

MERRA climatic data comprise a grid-point, worldwide dataset. If any assigned coordinate does not match exactly with any grid point, then climatic data for that particular point are calculated from the adjacent grid points.

The user checks the MERRA radio button and then selects the "Select Location" button to open a window for users to select the location by clicking on the map, entering the city/location name, or entering coordinates in the search box (see figure 5). After that, the user presses the "Select" button to move forward.

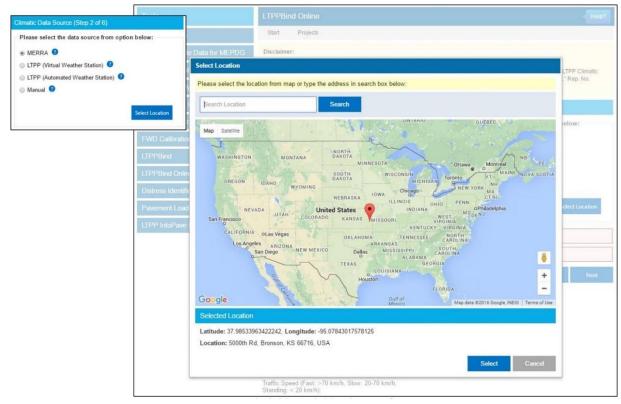

Source: FHWA LTPP InfoPave

Figure 5. Screenshot. LTPPBind Online—select location for MERRA data. (1)

MERRA climatic data are then displayed on the next window under the Climatic Data status bar. These climatic data include the lowest annual air temperature, low air temperature standard deviation, yearly degree days above 10 °C, high air temperature of the annual hottest 7 consecutive d, and standard deviation of the high 7 d.

LTPP (Virtual Weather Station (VWS))

The LTPP climatic data are selected with VWSs or automatic weather stations (AWSs) as shown in figure 6. LTPP developed the VWS concept to advance climatic statistics to represent the site conditions at each LTPP test section (because LTPP test sections are rarely located near an operating weather station). The method of selecting VWSs and how the VWS concept has been implemented for LTPP test sections has been reported in *Evaluation of Long-Term Pavement Performance (LTPP) Climatic Data for Use in Mechanistic-Empirical Pavement Design Guide (MEPDG) Calibration and Other Pavement Analysis.* (9) In the VWS option, the LTPP section is selected by State code and section identification. The climatic data information is then updated automatically for the selected LTPP test section location.


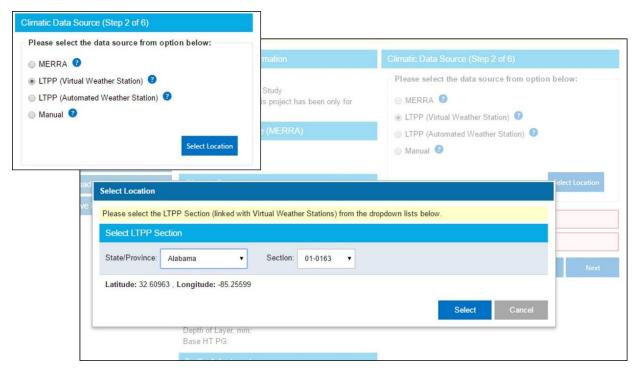


Figure 6. Screenshot. LTPPBind Online—select LTPP station. (1)

LTPP (AWS)

In the LTPP Specific Pavement Studies (SPS)-1, SPS-2, and SPS-8 experiments, AWSs were installed, as shown in figure 7.⁽¹⁰⁾ These weather stations were installed and operated by the LTPP Program at or near the SPS projects. The concept of AWSs ha been described in *Evaluation of Long-Term Pavement Performance (LTPP) Climatic Data for Use in Mechanistic-Empirical Pavement Design Guide (MEPDG) Calibration and Other Pavement Analysis.*⁽⁹⁾ In the AWS option, the location has been selected by clicking on the available AWSs available only in the United States. The climatic data information is then automatically updated for the selected AWS location.

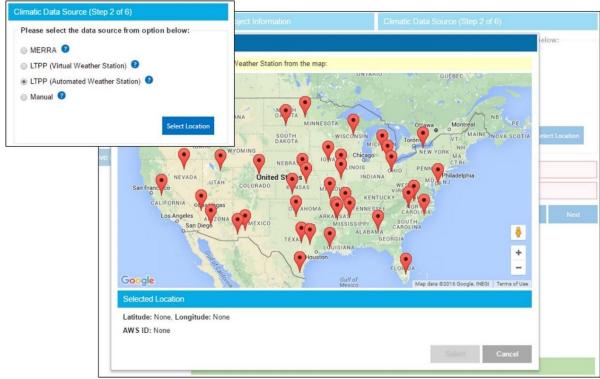

Source: FHWA LTPP InfoPave

Figure 7. Screenshot. LTPPBind Online—select LTPP AWS.(1)

Manual Climatic Data

To calculate the binder PG for manual climatic data, users need to manually enter the coordinates of the location, lowest annual air temperature, low air temperature standard deviation, yearly degree days above 10°C, high air temperature of the annual hottest 7 consecutive days, and standard deviation of the high 7 days in the designated boxes.

Climatic Data Results

After the data source is selected, LTPPBind Online determines a binder PG based on the input values.⁽¹⁾ Figure 8 shows the generated climatic data after the MERRA data option for a specific location was selected.



Figure 8. Screenshot. LTPPBind Online—generated climatic data. (1)

Target Rut Depth

The Mohseni model was developed for a target rut depths between 5.1 to 12.7 mm.⁽⁶⁾ The AASHTO *Mechanistic-Empirical Pavement Design Guide* provides a range of recommended rut depth values at the end of design life as a function of the functional class; those values can be seen clicking on the question mark next to the Target Rut Depth title (see figure 9).⁽¹¹⁾



Figure 9. Screenshot. LTPPBind Online—target rut depth. (1)

Temperature Adjustment

Temperature adjustment is applied to calculated the PG for a binder course layer below the surface course. As is shown in figure 10 the depth of the upper layer is provided Base HT grade is an initial estimate of the HT PG. When the depth of the layer is provided, the HT is calculated at any other depth ranges from 0 to 200 mm. The equations

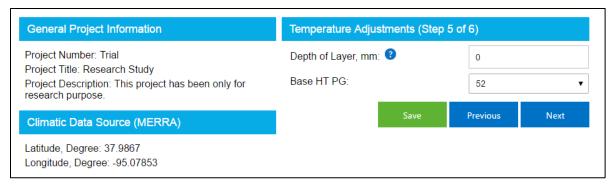


Figure 10. Screenshot. LTPPBind Online—Temperature adjustments. (1)

Traffic Adjustments

The Traffic Adjustments step has two inputs: traffic loading in ESAL units for the design period in millions and traffic speed, as shown in figure 11. Traffic speed is categorized as fast, slow, and standing. After users enter these traffic adjustment parameters and press "Calculate," to obtain the PG value.



Figure 11. Screenshot. LTPPBind Online—traffic adjustments. (1)

Report

PG binder is calculated based on AASHTO M320-10 and also AASHTO M332-14. (2,3) Traffic adjustment according to AASHTO M320-10 is executed by changing the grade directly. (2) PG binder by AASHTO M332-14 standard includes one extra parameter for traffic in addition to HT and low-temperature grades. (3) "S," "H," "V," and "E" stand for standard, high, very high, and extremely high traffic loading, respectively.

The final PG report is in tabular format with all the input parameters at the top, as shown in figure 12. The report includes all the information used to calculate the PG binder, and the report can be converted to a digital file or printed.

PG Temperature	High	Low
Performance Grade Temperature at 50% Reliability	64.2	-12.7
Performance Grade Temperature at 98% Reliability	66.2	-20.6
Adjustment for Traffic (AASHTO M323-13)	7.8	
Adjustment for Depth	0.0	0.0
Adjusted Performance Grade Temperature	74.0	-20.6
Selected PG Grade	76	-22
PG Grade	M320, PG 76-22	
AASHTO M 332-14 Performance-Grade Asphalt Binder u PG Temperature	sing Multiple Stress Creep Recover	ry (MSCR) Test
Performance Grade Temperature at 50% Reliability	64.2	-12.7
<u> </u>	66.2	-20.6
Performance Grade Temperature at 98% Reliability	S	
Performance Grade Temperature at 98% Reliability Designation for traffic loading		
<u> </u>	70	-22

Figure 12. Screenshot. LTPPBind Online—report.(1)

ALGORITHMS

This section includes information about the required input parameters, the temperature calculation steps, and the PG calculation procedure according to the rutting damage model developed by Mohseni et al. (6)

Low-Temperature PG Selection

Low-temperature PG binder is selected using the algorithm developed from LTPP climatic data. The empirical algorithm was developed from LTPP's Seasonal Monitoring Program (SMP) data. (4) The algorithm relates low pavement temperature to air temperature, latitude, and depth, as shown in figure 13:

$$T_{L,pav} = -1.56 + 0.72 \, T_{air} - 0.004 \, Lat^2 + 6.26 \, log(H+25) - Z \big(4.4 + 0.52 \, \, \sigma_{T_{air}}^2 \big)^{0.5}$$

Figure 13. Equation. Low pavement temperature at surface.

Where:

 $T_{L,pav}$ = Low asphalt concrete pavement temperature at surface, °C.

 T_{air} = Low air temperature, °C.

Lat = Latitude of the section, degrees.

H =Depth to surface, mm.

 $\sigma_{T_{air}}^2$ = Standard deviation of the mean low air temperature, °C.

Z =Standard normal distribution value 2.055 for 98 percent reliability.

More detailed information on the LTPP models are included in the corresponding literature. (7, 12, 13) The LTPP HT model was not used in this version of the program because it provided very similar results to the Strategic Highway Research Program model at 98-percent reliability.

HT PG Selection Using Rutting Damage Model

This model was developed for HT PG based on the rutting damage model developed under the National Cooperative Highway Research Program 1-37A project. (14) Hourly pavement temperatures for a 20-year period were generated for 186 sites throughout the United States and PG was calculated based on a rutting damage model. (6, 14)

The algorithm consists of an equation that estimates base PG binder using a degree-days concept and target rut depth for 50-percent reliability (figure 14). Another equation estimates the PG variability with latitude, then the base PG is adjusted for higher reliability than 50 percent (Figure 16).

$$PG_{H.d} = 48.2 + 14 DD - 0.96 DD^2 - 2 RD$$

Figure 14. Equation. HT PG damage at rut depth.

Where:

 $PG_{H,d} = PG$ damage at a rut depth.

DD = Average Yearly Degree-Days Air Temp. Over 10°C, x1000°C.

RD = Rut depth (5-13 mm).

Estimate PG Variation

PG variation is estimated from the latitude and rut depth. The adjustment is minimal for the latitudes of less than 30 degrees or rut depths of less than 7.62 mm. As site latitude or rut depth increases, the yearly PG variation also increases.

$$CVPG = 0.000034 (Lat - 20)^2 RD^2$$

Figure 15. Equation. PG coefficient of variation.

Where:

CVPG = Yearly PG coefficient of variation, percent.

Adjust PG for Reliability

The damage-based HT PG transfer function calculated with Figure 14 is adjusted for yearly PG variation adding a reliability term as is shown in Figure 16.

$$PG_{H,rel} = PG_{H,d} + (Z) \left(PG_{H,d} \right) \frac{CVPG}{100}$$

Figure 16. Equation. HT PG adjusted for reliability.

Where:

 $PG_{H,rel} = PG$ at a reliability level Z, °C.

DD = Average Yearly Degree-Days Air Temp. Over 10°C, x1000.

PG Bumping for HT

PG adjustments for traffic loading and speed that were described by Mohseni are used in this version of the program. The adjustments were developed based on the rutting damage concept used for the development of performance-based PG. Adjustments were developed as the difference between PG for standard traffic conditions (ESAL of 3 million and high speed) and PG for a different condition as seen in figure 17:

$$Adj = PG_n - PG_s$$

Figure 17. Equation. PG bumping for HT.

Where:

Adj = PG adjustments for a site.

 $PG_n = PG$ at a specific traffic loading and speed.

 $PG_s = PG$ at standard loading (3 million axles) and high speed.

The grade bumping table is shown in table 1. For example, the HT calculated with the rutting performance model will be increased by 9.5 if the traffic speed is slow, traffic loading is 8 ESAL million, and the asphalt HT base grade is 58.⁽¹⁴⁾

		Traffic Loading ESAL, millions				
Speed	Base Grade	<3	3–10	10-30	30	
Fast	52	0.0	7.8	13.2	15.5	
	58	0.0	7.1	12.3	14.5	
	64	0.0	6.5	11.3	13.4	
	70	0.0	5.8	10.4	12.4	
Slow	52	2.8	10.3	15.5	17.7	
	58	2.7	9.5	14.5	16.6	
	64	2.6	8.8	13.5	15.5	
	70	2.4	8.0	12.4	14.4	

Table 1. Grade bumping.

PG designation for traffic loading

Under AASHTO M332-14 standard, he binder grade is calculated based on HT PG without "grade bumping" and low-temperature PG without any adjustment. (3) It is included a designation for traffic loading per table 2.

Table 2. Designation for traffic loading.

Designation	Traffic Loading ESAL, Millions	Conditional	Traffic Speed (km/h)
S	<10	And	>70
Н	10–30	Or	20–70
V	>30	Or	<20
Е	>30	And	<20

Adjusting PG with Depth

LTPP pavement temperature algorithms were used to adjust selected PGs for a certain depth into the pavement. The LTPP algorithms are empirical models developed from LTPP SMP data. (4) These algorithms relate pavement temperatures (low and high) to air temperature, latitude, and depth. (12,13) The PG selection for HT was made using the HT algorithm using rut damage concept. The LTPP HT model shown in figure 18 was only used for adjusting PGs with depth.

$$T_{H,pav} = 54.32 + 0.78 T_{air} - 0.0025 Lat^2 - 15.14 log(H + 25) - Z(9 + 0.61 \sigma_{Tair}^2)^{0.5}$$

Figure 18. Equation. Pavement temperature below surface.

Where:

 $T_{H,pav}$ = High asphalt concrete pavement temperature below surface, °C.

 T_{air} = High air temperature, °C.

 $\sigma_{T_{air}}^2$ = Standard deviation of the high 7-days mean air temperature, °C.

REFERENCES

- 1. FHWA. (2016). *Long-Term Pavement Performance Bind Online Tool*, Federal Highway Administration, Washington, DC., obtained from: https://infopave.fhwa.dot.gov/Tools/LTPPBindOnline, last accessed December 12, 2016.
- AASHTO. (2014). "Standard Specification for Performance-Graded Asphalt Binder, AASHTO Designation M 320-10," Standard Specifications for Transportation Materials and Methods of Sampling and Testing, Report No. M 320-1-M 320-7, American Association of State Highway and Transportation Officials, Washington, DC.
- 3. AASHTO. (2014). "Standard Specification for Performance-Graded Asphalt Binder Using Multiple Stress Creep Recovery (MSCR) Test, AASHTO Designation M 332-14," *Standard Specification for Transportation Materials of Sampling and Testing*, Report No. M 332-1-M 332-7, American Association of State Highways and Transportation Officials, Washington, DC.
- 4. Rada, G. R., Elkins, G. E., Henderson, B., Van Sambeek, R. J., and Lopez, J., A. (1995). LTPP Seasonal Monitoring Program: Instrumentation Installation and Data Collection Guidelines, Report No. FHWA-RD-94-110, Federal Highway Administration, Washington, DC.
- NASA. (2015). MERRA: Modern-Era Retrospective Analysis for Research and Applications, Goddar Space Flight Center, Global Modeling and Assimilation Office, Greenbelt, MD, obtained from: http://gmao.gsfc.nasa.gov/merra/, last accessed March 9, 2015.
- 6. Mohseni, A., Carpenter, S. H., and D'Angelo, J. (2005). "Development of Superpave High-Temperature Performance Grade (PG) Based on Rutting Damage (With Discussion and Closure)," *Journal of the Association of Asphalt Paving Technologists*, 74 (1), pp. 197–254, The Association of Asphalt Paving Technologists, Lino Lakes, MN.
- 7. Mohseni, A. (1998). *LTPP Seasonal Asphalt Concrete (AC) Pavement Temperature Models*, Report No. FHWA-RD-97-103, Federal Highway Administration, Washington, DC.
- 8. FHWA. (2016). *LTPP InfopaveTM*, Federal Highway Administration, Washington, DC., obtained from: https://infopave.fhwa.dot.gov/, last accessed December 15, 2016.
- 9. Schwartz, C. H., Elkins, G. E., Li, R., Visintine, B. A., Forman, B., Rada, G. R., and Groeger, J. L. (2015). *Evaluation of LTPP Climatic Data for Use in Mechanistic-Empirical Pavement Design Guide (MEPDG) Calibration and Other Pavement Analysis*, Report No. FHWA-HRT-15-019, Federal Highway Administration, Washington, DC.
- 10. FHWA. (2016). *Specific Pavement Studies*, Federal Highway Administration, Washington, DC., obtained from: https://www.fhwa.dot.gov/research/tfhrc/programs/infrastructure/pavements/ltpp/sps.cfm, last accessed February 21, 2017.
- 11. AASHTO. (2015). *Mechanistic-Empirical Pavement Design Guide: A Manual of Practice, Second Edition*, American Association of State Highway and Transportation Officials, Washington, DC.

- 12. Mohseni, A., and Symons, M. (1998). *Improved AC Pavement Temperature Models from LTPP Seasonal Data, 77th Annual Meeting Transportation Research Board*, Transportation Research Board, Washington, DC.
- 13. Mohseni, A., and Symons, M. (1998). Effect of Improved LTPP AC Pavement Temperature Models on SuperPave Performance Grades, 77th Annual Meeting Transportation Research Board, Transportation Research Board, Washington, DC.
- 14. NCHRP. (2004). *Guide for Mechanistic-Empirical Design of New and Rehabilitated Pavement Structures*, Report No. 1-37A, National Cooperative Highway Research Program, Washington, DC.